

數位鏡頭UV保護鏡適用鏡頭 總對照表 2010 / 05/18

品牌	相機型號	mm	品牌	相機型號	mm
BENQ			Panasonic		
BENQ	DC C540/C640/X800	16	Panasonic	SD 780IS//FS6/FS7	16
BENQ	DC5330/ C51/E53 /S30/E1000/T800	18	Panasonic	LC33 / LC43 / F1 /FZ10/ SV-AS10 /FX07/FX08/FX09	18
BENQ	T700	20	Panasonic	FX36GX(FX35)/FS3/FS5/FS20	18
BENQ	C50/ X725 /T700	22	Panasonic	DMC-FX01/FX10/FX12/FX30/FX33/FX55/FX5/	20
			Panasonic	FX36GX(FX35)/FX520/FX38/ F48	20
			Panasonic	FS15/FS25	20
Canon			Panasonic	DMC-FX100/FX50/FX180	22
Canon	IXUS i	10	Panasonic	LX3	26
Canon	IXY30 / PC 1035	14	Panasonic	TZ15/LX3	28
Canon	IXUS 30/40/50/55/60/65/ Powershot A420/A540/A460/A470/	16	Panasonic	LX2/TZ3/TZ7	30
Canon	IXUS 90IS/IXUS 100IS/ 130IS/210IS/300HS	16	Panasonic	TZ3/T22/ZS3/ ZS7	32
Canon	IIs/PC1018/A460/S30/S45/S50/ 105IS	18	Panasonic	LC40/TZ1	36
Canon	IXUS 70/75/80IS/85IS/90IS/95IS/ 120IS/200IS	18	Panasonic	FZ1/ FZ8	42
Canon	IXUS 300/320/400/500/700/750/860/	18	Panasonic		
Canon	Powershot A530/A580/900Ti	20			
Canon	IXUS 800IS/ 850IS/ 860IS/870IS/900IS/ 960IS/ 980IS/110IS/ A3000	20	Pentax		
Canon	PC1099/PC1101/PowershotA60/A80/A85/A90/	22	Pentax	T10/W10/Wpi/W30/L36/V10/E50	16
Canon	IXUS 860IS/950IS/ 990IS	22	Pentax	T30	18
Canon	S10 / S60 / S80/PowershotA70/A2000IS/IXUS 970IS/ S90	24	Pentax	OptioX /S4 /S4i /S5i /S5n/S6/S40/S50/S60/S10/S12/	20
Canon	SX210IS	26	Pentax	A10/A30/A36/ P70/V10/M50/M60	20
Canon	S70/ PowershotA630/A640	28	Pentax	Optio 33L/ 330GS/A30/S10	22
Canon	Powershot S11S/S21S/A650IS/A710IS/G7/G9/SX100IS/SX110IS	32	Pentax	A20	24
Canon	G7	34	Pentax	Optio 750z	26
Canon	SX200IS	36	Pentax	Optio SV /450 /550/ 750Z	30
Canon	G10	38	Pentax	Optio MX	32
Canon	S31S/S51S	42			
Canon	SX1	46			
			PREMIER		
CASIO			PREMIER	DV C2	14
CASIO	EX-S600/ DGQ4/S10	10	PREMIER	DS-4330 /5240/5341/5530/5530R/DC 2070/3306/5566	16
CASIO	EX-Z70/Z85	14	PREMIER	X5 / DM6331/8360/8366/8365	18
CASIO	EX-Z600/ Z80/ Z12/ Z20/ Z77/ Z80/ Z90/Z29	16	PREMIER	DVD 7000	20
CASIO	DDV S670/R4 /R41 /R51 /S100 / S12SR/ Z35/Z550	16	PREMIER	DS-5330/ 6330/ 8330	22
CASIO	EX-S770/S10/ S12	18	PREMIER	DC-2320	24
CASIO	EX-Z750/Z850/NV3/Z75/Z1080/Z150/Z2/ Z33/Z280/Z350/Z2000	18			
CASIO	EX24 /EX24B /I57/EXS600/F50/	20	RICOH		
CASIO	EX-Z500/Z1000 / Z1200/Z100/Z200SR/ Z400	20	RICOH	D430 / U-CA4/V700	18
CASIO	EX-Z4/EX-Z240 / EX-Z50 /EX-Z55/EX-Z57/Z700/EX-S770/	22	RICOH	D201/301/V3/V4/V50/V6	20
CASIO	FC100/Z400	22	RICOH		22
CASIO	H5	26	RICOH	Caplio G4/ R1/R1V/ R2/	24
CASIO	EXP505	24	RICOH	GR Digital I/ GR Digital II/GR Digital III	26
CASIO	H10	28	RICOH	DMX-C1/ C4/GX100/ GX200	28
			RICOH	Caplio R4/ R5/R6/R7/R8/R10/ CX3	32
DIGILIFE			RICOH	CX1	34
DIGILIFE	DDV-S670/DG Q4	16	RICOH		36
Digimaster					
Digimaster	I-gic Super	20	Rollei		
			Rollei	101	16
			Rollei	DA70	18
FUJIFILM			Rollei	140/4S-10	20
FUJIFILM	50i	8			
FUJIFILM	Z10	12			
FUJIFILM	Z5	14	SANYO		
FUJIFILM	A301/FinePixF420/F30/F31/Z3/J10/J12	16	SANYO	E7 EX	20
FUJIFILM	F402/M603/F110/F20/F31fd/F40fd/F50fd/E1235/J25	18	SANYO	CG6/CA65/	22
FUJIFILM	A210/A900/DMC-FX /F10/F440/F450/F455/ F60fd// J38	20	SANYO	CA6	24
FUJIFILM	A202/E550/F30/F601/F810/	22	SANYO	TH1	30
FUJIFILM	A303/F410/F700/F710/F100fd	24	SANYO	HD1/HD2/HD1000	34
FUJIFILM	F200EXR/ F80EXR/F85EXR	26	SANYO	HD2000	42
FUJIFILM	F610 / J110W/J150WF70 EXR	28			
FUJIFILM	FinePix 2600Z	30	SIGMA		
FUJIFILM	S304/S5000	34	SIGMA	DP2	
FUJIFILM	S5700	36			
FUJIFILM	S602Z/S3000/S2 Pro	38	SONY		
FUJIFILM	S602/S7000	42	SONY	F77/ FX77	10
			SONY	T1/T5/T7/T9/T11	11.5

Kodak				SONY	M1/T30/T50/T10/ T70	12
Kodak	V530/ V550/ LS743/ LS753	16	SONY	L1/T70		14
Kodak	LS755/ V603/C713/V1073	18	SONY	W30/W50/W70/T3		16
Kodak	C360/CX6230 /6330 /7300/7330/7430/7530/LS633/V803/V1003	20	SONY	T77 / T90/TX1		T
Kodak	DX6340 / 7653	22	SONY	W1/W5/W7/P7/P9/P100/P150/P200/N1/T33/		18
Kodak	DX4530/ 6440/ 7440 / 7630	24	SONY	W100/W200/W300		18
Kodak	Z8	36	SONY	P2/P8/P10/P31/P32/P41/P71/P72/P92/W120/ W230		20
Kodak	V570/ Z712	38	SONY	W320/WX1/W380		20
Kodak	DX6490/ 7590/DX7590/Z740	40	SONY	DSC-W150/DSC-W170		26
Kodak	V610/P880	42	SONY	V1/V3/DSC-H3		28
			SONY	DSC-H10/ W270/W290		30
			SONY	SR11/SR12		32
Konica Minolta			SONY	DSC-H10		34
Konica Mino	G530/G600/ KD310Z / 400Z /420Z/510Z	16	SONY	S75/VC CD500		36
Konica Mino	Xi	18	SONY	H1		38
Konica Mino	E223 / F100/F200/F300	22	SONY	H10		39
Konica Mino	Z1/Z2	40	SONY	H9/H50		40
			SONY	HX1		45
			SONY	TX7		TX7
Leica						
Leica	C-LUX 2	20	Sumsung			
Leica	D-LUX 4	28	Sumsung	I50/L110/L201		16
Leica	D-LUX 3 /	30	Sumsung	ST500/ST550/PL150		17
Leica	V-LUX20	32	Sumsung	V700/NV3/i8/L83T/ PL50/ES70/ST60		18
			Sumsung	i7/V6/V50/NV24HD/L100		20
Microtek			Sumsung	L77/M310W		22
Microtek	MV320	32	Sumsung	NV100HD/ WB1000		24
			Sumsung	WB600/WB650/EX1		32
			Sumsung	WB500		36
Nikon						
Nikon	S51/S52C	☆				
Nikon	S5	9.5	Praktica			
Nikon	S6/S7/S8/S9	14.5	Praktica	8303		16
Nikon	Coolpix 2100/3100/3200/3700/L10/L11/L12/L14/L15/L16/L18/	16	Praktica	10-XS		18
Nikon	E3500/S1/S3/S200/S210/S220/S230/S500/S600/ S220/S230/S3000	16				
Nikon	Coolpix SQ/4200/ 4600/5200/5600/5900/7600/	18	品牌	DV型號		mm
Nikon	Coolpix L2/L3/L6/L12/ L100/L19/L20	18	Canon	ZW RA50		26
Nikon	S510/S520/	18	Canon	ZR 60MC/65MC/70MC/80MC/85MC/90MC		28
Nikon	Coolpix 4100/ P1/P2/P5100/P80/L3/FX33/S700/	20	Canon	FS200		30
Nikon	Coolpix 2200/P5100/S550/S600/S620/S700/	22	Canon	HF200		32
Nikon	CoolPix 2500 /3500 /4500 / 5700 / 885/ 995/ P4/P5000/L4/L5/	24				
Nikon	S710	24	HITACHI	DZ MV350A		26
Nikon	Coolpix 4300/S710/ S6000	26	HITACHI	DZ MV780/GX3100A/MV730/BX35A/GX3200A		28
Nikon	Coolpix L6	28	HITACHI	DZ MU380A		32
Nikon	CoolPix 4800 / S8000	30				
Nikon	CoolPix 5000 /E5400 /S4/S10	32	JVC	MG40/50/GRD570TW		22
Nikon	CoolPix 8400	38	JVC	GZMC100/200, GRX5,GRD90U		24
Nikon	Coolpix 8700	42	JVC	GZ-MG155/MG275		20
Nikon	P90	41.6	JVC	MG575		26
			JVC	HS9		30
OLYMPUS			JVC	GZ-HD30TW		38
OLYMPUS	μ700	14	JVC	GZ-MG530TW		40
OLYMPUS	C-360 / 450 /400 /410 /500/600/700/800/mini-S/AZ-1/μ300 /μ320	16	JVC	GZ-MG575TW		42
OLYMPUS	μ730/FE3000/FE3010/FE45/FE360/ FE20/FE4030	16				
OLYMPUS	SP700/C5/C500Z/C60Z/X200/IR300/FE150/FE280/FE300/ FE4000	18				
OLYMPUS	μ10/μ820/μ1200/μ830/μ840	18	Panasonic	DV 4020		28
OLYMPUS	C6/SP310/SP350/SP700/μ740/μ780/μ1000/μ840/μ1010/μ1020	20	Panasonic	700X		30
OLYMPUS	S4/X1/ X2/FE240/FE340/FE370/FE5000/FE5010	20	Panasonic	DV 901D/ H80		32
OLYMPUS	FE290/ μ1060/μ7000/μ7010/μ7020/FE5020	22	Panasonic	DV 7020		38
OLYMPUS	E6	24	Panasonic	MX 5000		43
OLYMPUS		26				
OLYMPUS	μ740/ μ750/μ9000/ μ9010	28	SHARP	VL NZ50 / VL MC500		28
OLYMPUS	C70Z/E200	32	SHARP	VL Z1 (遮光罩),VL Z5 (遮光罩),VL Z7 (遮光罩)		34
OLYMPUS	C5050Z	36				
OLYMPUS	SP-500uz/C-750uz / C-770uz	40	SONY	DCR 101 / DCR 201/ DLip-310		20
OLYMPUS	SP-590UZ	42	SONY	DCR HC40,DCR HC42		22
OLYMPUS	SP-600UZ	49	SONY	TRV 17 /PC 350 / DCR-dvd200		24
OLYMPUS	SP-800UZ	50	SONY	CX150/XR150		27

		SONY	TRV22/30/33/38/60/70/80,DCR PC105	28
		SONY	CX350/CX550/XR350/XR550	31
		SONY	DCR PC330 /SR5/SR11/SR12/ HDR CX100/CX520	32
		SONY	XR500	32
		SONY	DCR-H1000	36